BURST SENSOR

Type GMG 12000KX



Installation Guide

The burst sensor is installed with the metal housing with the help of the two nuts into the mobile part (frame) of the bursting pane.

- 1. Unpack the burst sensor
- 2. Remove protective cap
- 3. Remove the outer nut
- 4. Install burst sensor on the bracket
- 5. Tighten the nuts
 The starting torque of max 10Nm may not be exceeded by fastening the burst-sensor!
- 6. Attach the bracket on the explosion vent panel
 On mounting the sensor you must make sure that the PTFE-ampoule will be
 destroyed safely on releasing the bursting pane.

Attention: The protection cap is only for transport security and has to be removed carefully by left-hand rotation on installation at the latest.











